

 
Network Video - GoPro Max Basics

18/03/2026 6:33 am +10

General maintenance

Here are some more tips to get the best performance from your camera:

- Always use the black lens cap to protect the lenses when you're not using your camera. The lenses are exposed to capture spherical content and are unprotected. Scratches to the lenses are not covered under the warranty.
- Use the clear Protective Lenses if you want added lens protection when you're using your camera. NOTICE: The clear lenses may affect image quality under certain conditions.
- To protect the lenses from damage, do not rest your camera on its front or back side. Be sure the lenses are not resting against any surface.

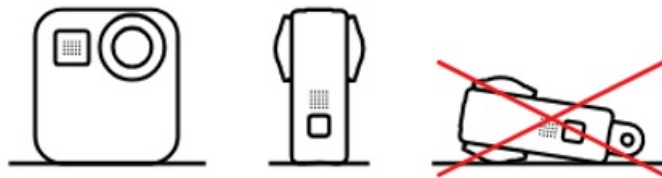

- To clean the lenses, wipe them with a soft, lint-free cloth. If debris gets stuck between the lens and the trim ring, flush it out with water or air. Do not insert foreign objects around the lenses.
- Your camera is waterproof to 16ft (5m) so no housing is needed. Be sure the door is closed before using the camera around water, dirt, or sand.
- Before closing the door, be sure the seal is free of debris. Use a cloth to clean the seal if needed.
- Before opening the doors, be sure that your camera is clean and dry. Rinse your camera with fresh water and dry it with a cloth if needed.
- If sand or debris hardens around the doors, soak your camera in warm tap water for 15 minutes and then rinse thoroughly to remove the debris. Make sure your camera is dry before opening the doors.
- For best audio performance, shake your camera or blow on the mics to remove water and debris from the microphone holes. Do not use compressed air to blow into the mic holes. This could damage the internal waterproof membranes.
- After every use in salt water, rinse your camera with fresh water, and dry with a soft cloth.

 


WARNING: The dual lenses of MAX are unprotected and are susceptible to scratches if not cared for properly. Always store MAX with the provided lens protection and avoid resting the lens on any surface. Scratches to the lens are not covered by the warranty.

GoPro MAX basics


[Link to GoPro MAX online manual](#)


Meet MAX

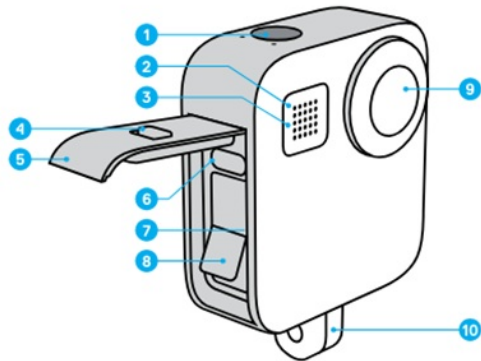

- 1. Shutter Button 
- 2. Status Light
- 3. Microphone
- 4. Door Lock
- 5. Door
- 6. USB-C Port
- 7. microSD™ Card Slot
- 8. Battery

 Meet MAX

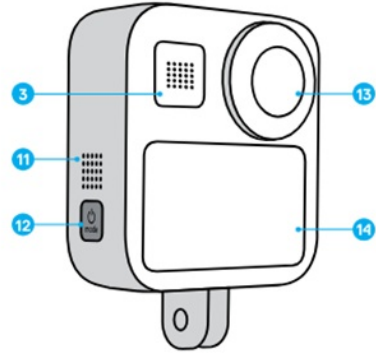

- 9. Camera Lens (Non-Screen Side)
- 10. Folding Fingers
- 11. Speaker
- 12. Mode Button 
- 13. Camera Lens (Screen Side)
- 14. Touch Screen

USING THE TOUCH SCREEN



Tap
Selects an item and turns a setting on or off.



Swipe Left or Right
Switch between Video, Photo, and Time Lapse modes.



Swipe Down From the Edge of the Screen
Open the Dashboard when your camera is in a landscape orientation.



Swipe Up From the Edge of the Screen
See the last photo or video you captured and access the Media Gallery.



Press and Hold the Capture Screen
Turn on and adjust Exposure Control.

Getting to Know Your GoPro

CAPTURE SCREEN

This screen gives you access to your camera's capture settings.



- 1. Current Mode (Video, Photo, or Time Lapse)
- 2. Recording Time/Photos Remaining
- 3. Digital Lens Shortcut
- 4. HERO/360 Mode Select
- 5. Battery Status
- 6. Horizon Lock Shortcut
- 7. Lens Switch
- 8. Capture Settings

 
Heads Up: The capture settings are not available when you rotate your GoPro to take portrait shots. Be sure to choose the settings you want before rotating your camera.

How to change the SD Card and Battery


Unlock the door, slide it down, and flip it open.




With your camera off, insert the SD card into the card slot with the label facing the battery compartment.

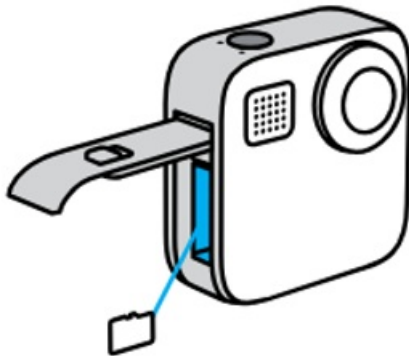

 You can eject the card by pressing it into the slot with your fingernail. Insert the battery.

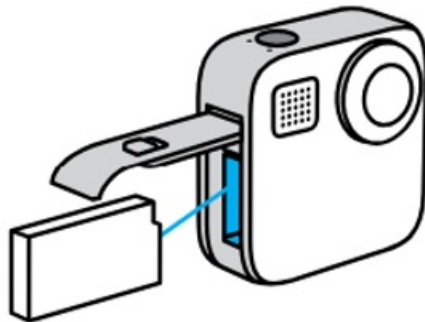

 Slide the door all the way up until there's no gap, and then lock it.

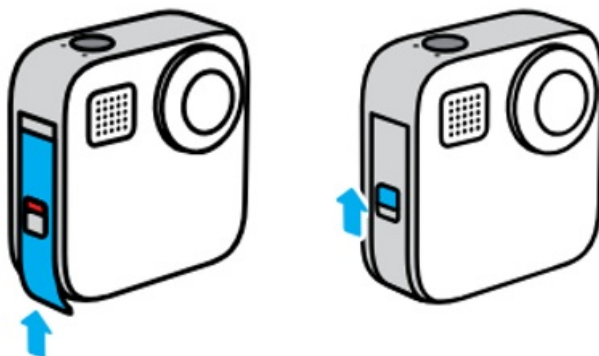

NOTICE: Push from the bottom to make sure that the door is closed correctly. Don't use the lock to slide

the door closed.

Playing Back Your Media









Playing Back Your Media

Swipe up to see the last video, photo, or time lapse you took. Swipe left and right to flip through the other files on your SD card.

Swipe up from bottom of screen to review footage.



The Media Gallery includes the following playback options:

-  Pause playback
-  Resume playback
-  See all of the media on your SD card
-  Delete the file from your SD card
-  Playback view
-  Play back at slo-mo or normal speed
-  Use a slider to scan through your videos or group of continuous photos
-  Add/remove HiLight Tag