
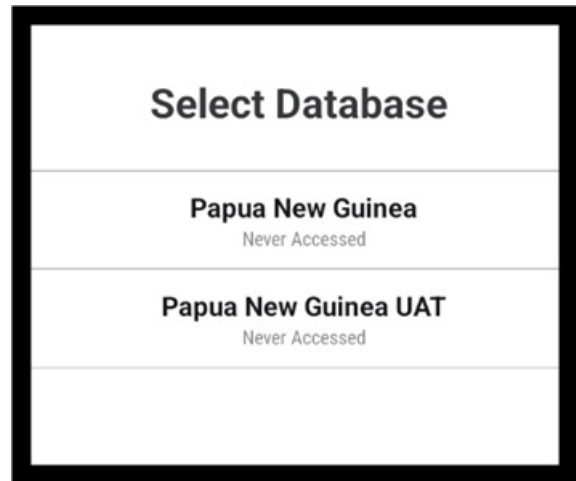


AWM Mobile Fundamentals

20/03/2026 10:35 am +10

Note: AWM used to be called RAMM.


When you first open RAMM (AWM) mobile you will see this log-in screen. Use the same log-in details as you would use for go.ramm.com. Next, you'll be asked to select the database. Select Papua New Guinea.

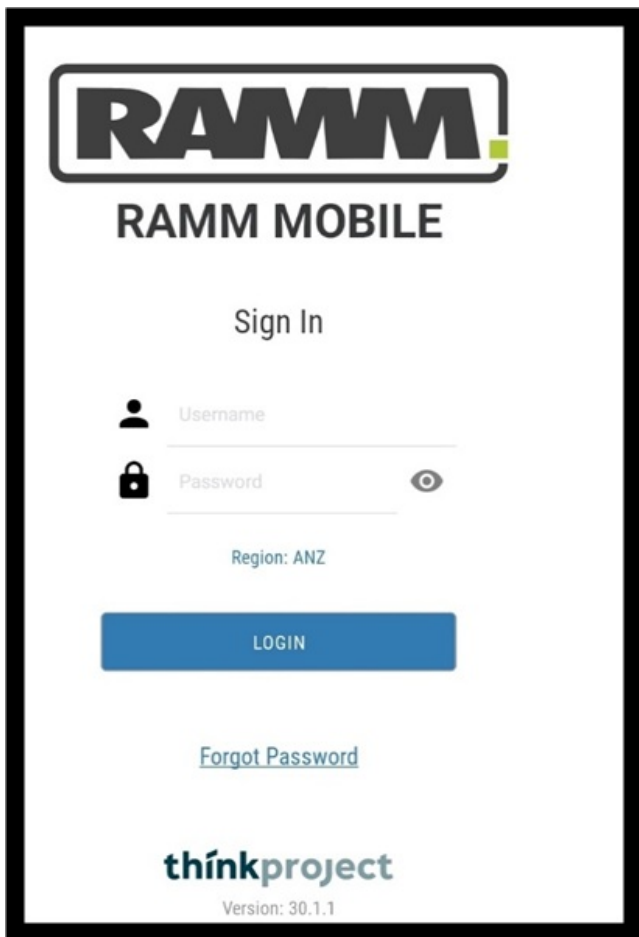


Next, you will see the screen below. There are no layers currently active on the map. Click on settings in the top right corner.




In the settings menu there are two key areas - **Enabled Groups** and **App Settings**. Enabled Groups is where you turn on different asset layers so that they are visible on the main map. App Settings is where you can change settings such as the base map layer, switch the test environment from alpha to beta or production mode (when production becomes available), change the theme colours to dark mode, turn on the secondary column for assets, update the map touch sensitivity and so forth. There will be more settings that become available as the beta environment gets updated and refined. Click on Enabled Groups.

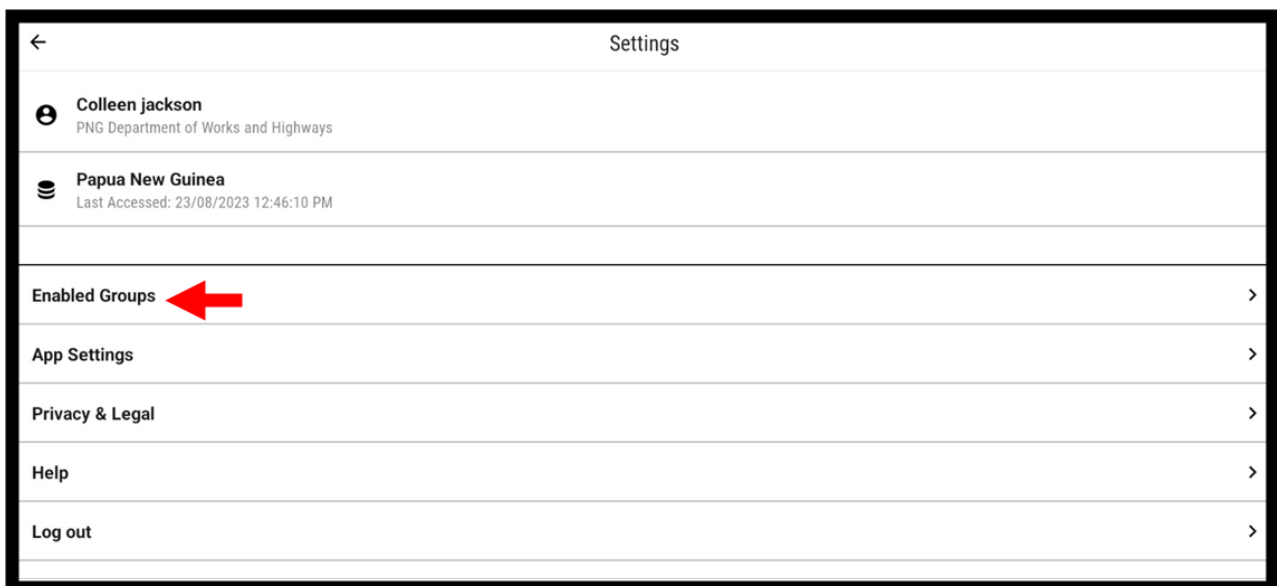


To turn things off and on in RAMM (AWM) mobile - you use the sliders shown on the far right next to assets. These sliders turn blue when a specific setting is activated and are greyed out when the setting is inactive. Click on the slider to activate the list of assets.

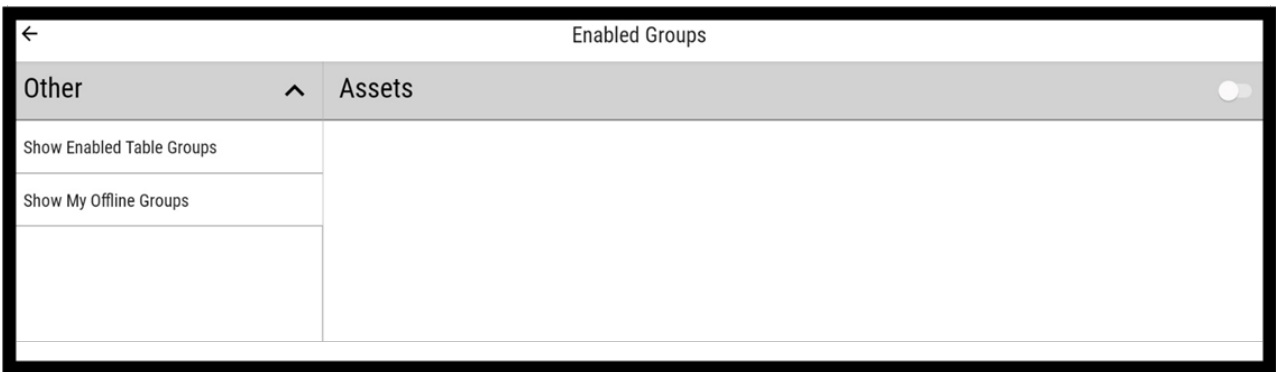

Once the asset list is activated, you can search as you normally would in AWM. Search for "Bridge" and select DoWH bridges (temporary). Remember the slider colour on the right will change to blue once activated.

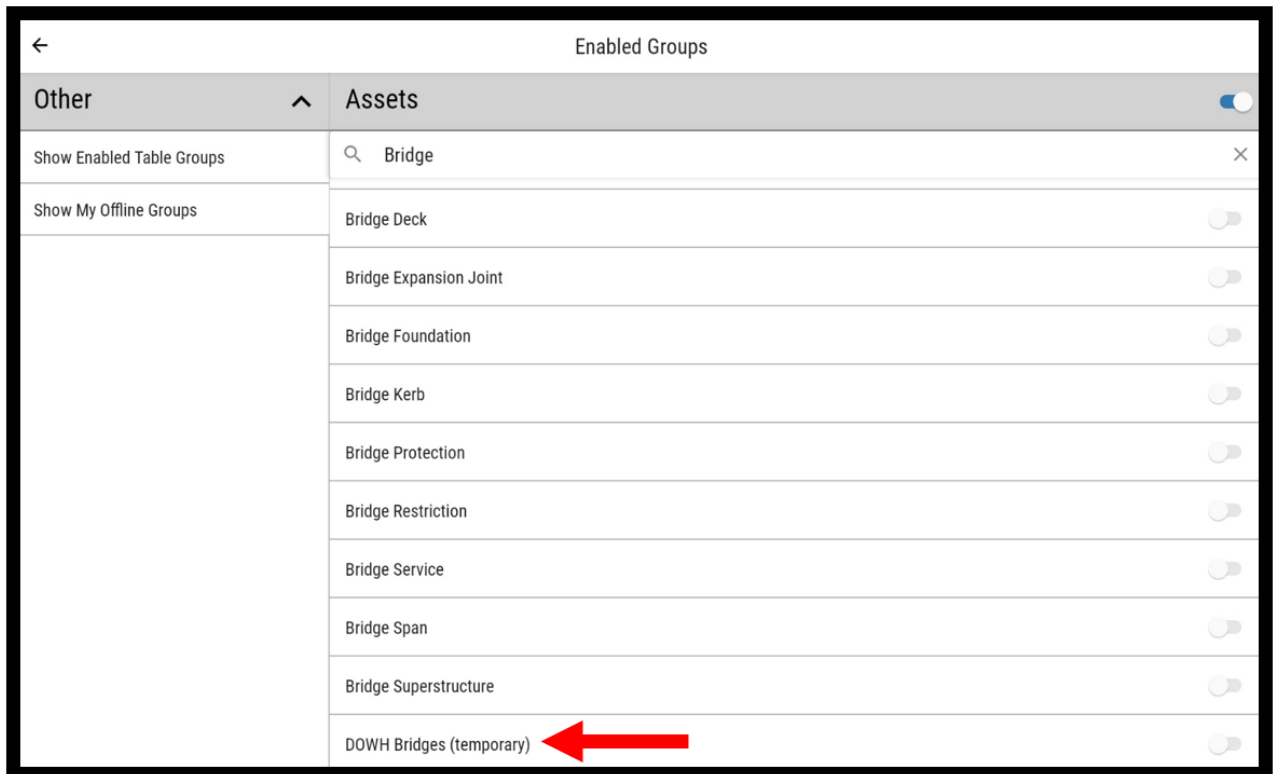


Once you have DoWH Bridges (temporary) loaded, search for linear reference point and then select Linear Reference Point.

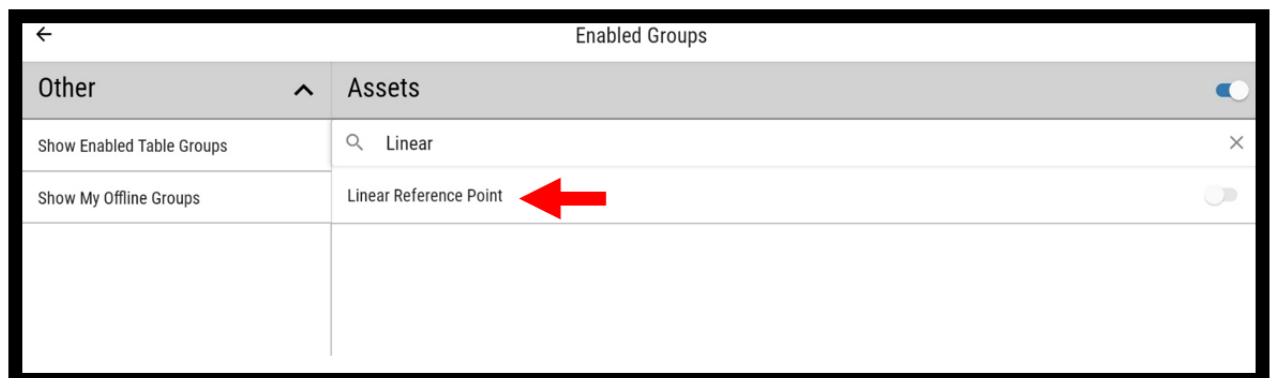


The next asset layer to load is Carriageway Section. Search for "Carriageway" and select Carriageway Section.

Once carriageway section is loaded, click on **Show Enabled Table Groups** on the left.

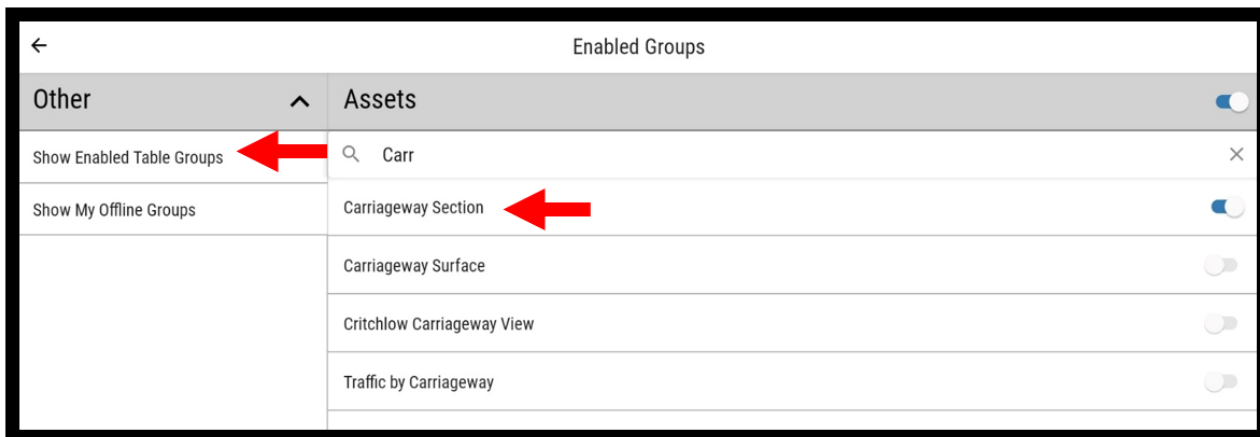


When you select Show Enabled Table Groups the list view will change to only show asset types you have selected. Click on the back arrow on the top left to go back to the main settings menu.

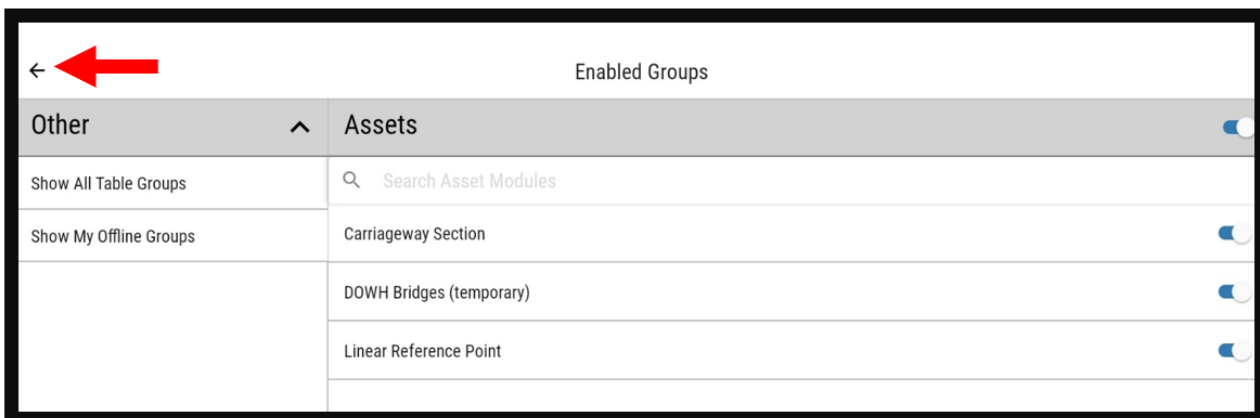


Now that we have the correct asset layers showing on the map, next we want to change the base map. Select App Settings.




We want to change the map source from mobile default, so select Map source under maps.

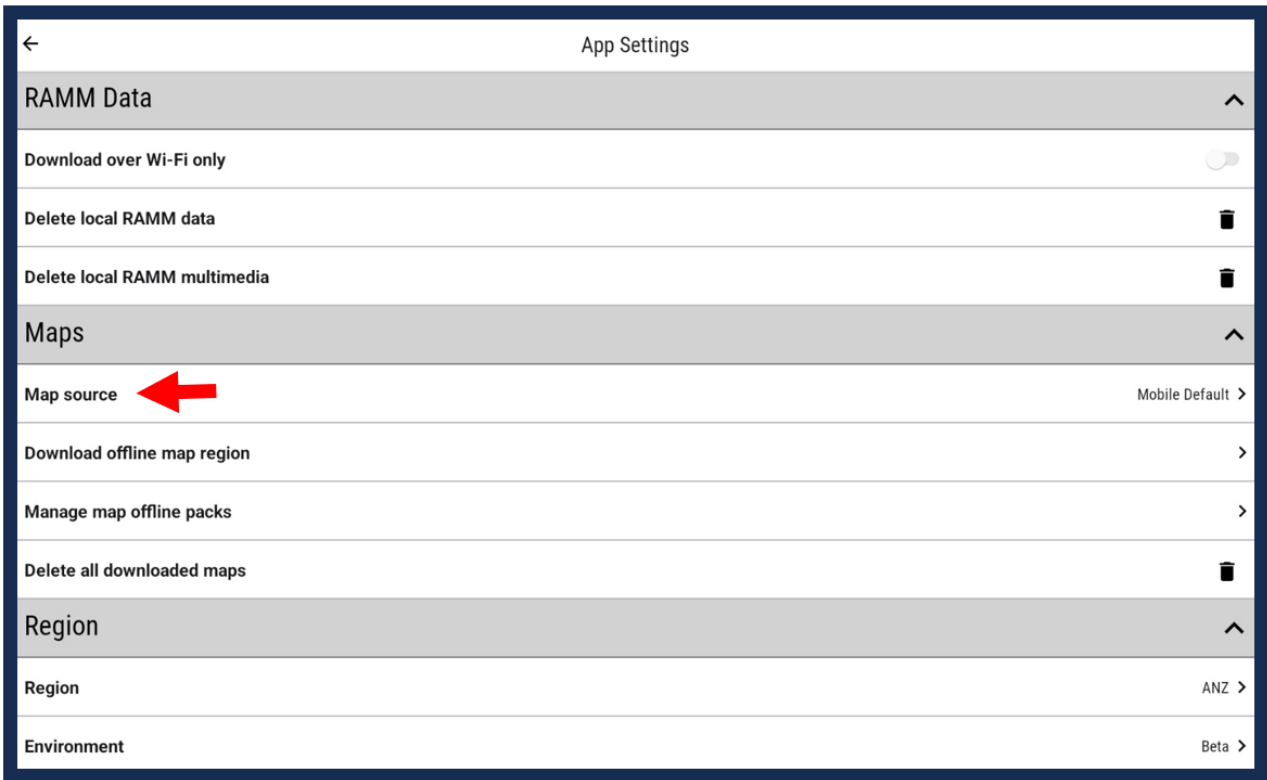

Select Open Streetmap and then select Load Open Streetmap on the left. A pop up should appear saying settings loaded. Once Open Streetmap is loaded, click on the back arrow to go back to the settings menu.

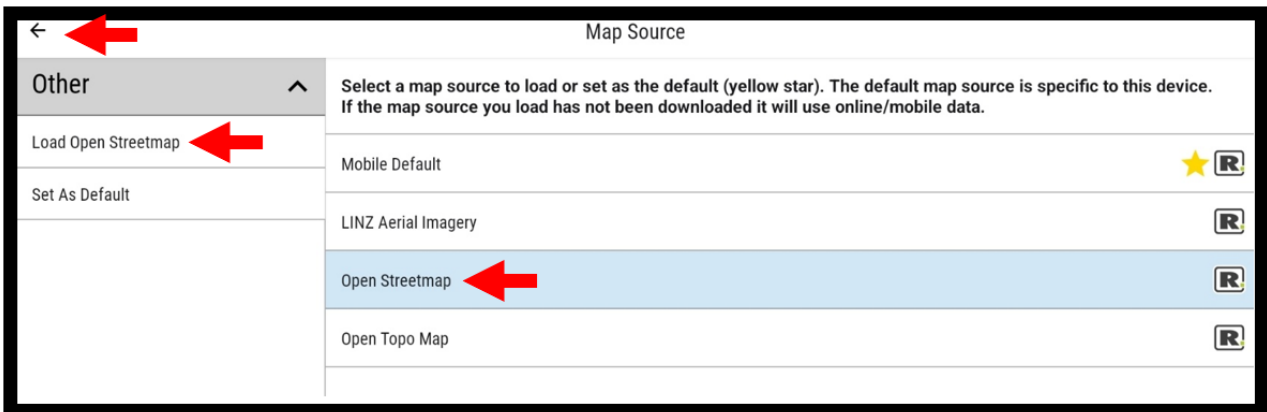

Select the back arrow on the top left to go back to the main settings menu.

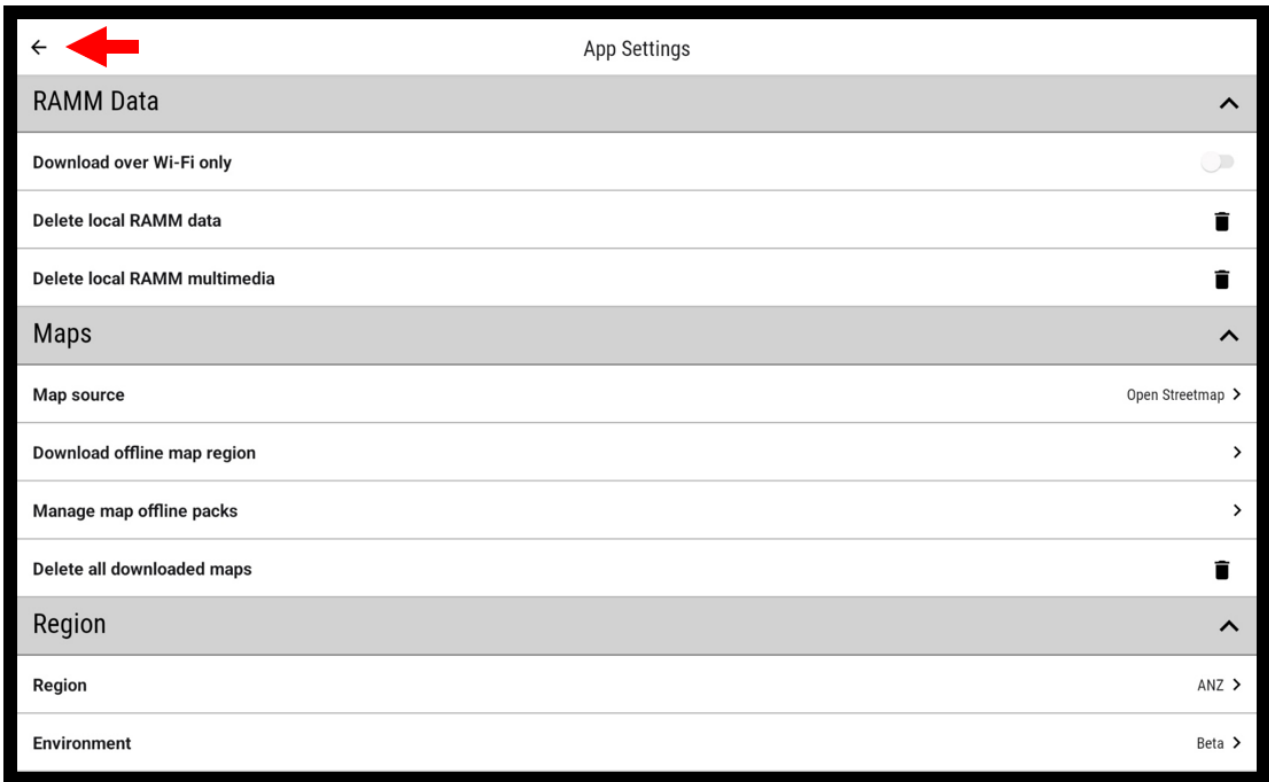

Select the back arrow on the top left to go back to the map view.

