AWM Mobile Fundamentals

16/12/2024 2:02 pm +10

When you first open RAMM (AWM) mobile you will see this log-in screen. Use the same log-in details as you would use for go.ramm.com. Next, you'll be asked to select the database. Select Papua New Guinea.



Next, you will see the screen below. There are no layers currently active on the map. Click on settings in the top right corner.

	Lat 147.19136, Long -9.45668	🌐 🏚 🔛 🅸
No Layers Active	< (I)	Q
	© mapbax ()	+

In the settings menu there are two key areas - Enabled Groups and App Settings. Enabled groups is where you turn on different asset layers so that they are visible on the main map. App settings is where you can change settings such as the base map layer, switch the test environment from alpha to beta or production mode (when production becomes available), change the theme colours to dark mode, turn on the secondary column for assets, update the map touch sensitivity and so forth. There will be more settings that become available as the beta environment gets updated and refined. Click on enabled groups.

÷	Settings		
0	Colleen jackson PNG Department of Works and Highways		
0))	Papua New Guinea Last Accessed: 23/08/2023 12:46:10 PM		
Ena	Enabled Groups		
Арр	Settings	>	
Priv	racy & Legal	>	
Hel	p	>	
Log	out	>	
Hel Log	out	> >	

To turn things off and on in RAMM (AWM) mobile - you use the sliders shown on the far right next to assets. These sliders turn blue when a specific setting is activated and are greyed out when the setting is inactive. Click on the slider to activate the list of assets.

÷		Enabled Groups	
Other	^	Assets	
Show Enabled Table Groups			
Show My Offline Groups			

Once the asset list is activated, you can search as you normally would in AWM. Search for "Bridge" and Select DOWH bridges (temporary). Remember the slider colour on the right will change to blue once activated.

÷	Enabled Groups	
Other ^	Assets	•
Show Enabled Table Groups	Q Bridge	×
Show My Offline Groups	Bridge Deck	
	Bridge Expansion Joint	
	Bridge Foundation	
	Bridge Kerb	
	Bridge Protection	
	Bridge Restriction	
	Bridge Service	
	Bridge Span	
	Bridge Superstructure	
	DOWH Bridges (temporary)	

Once you have DOWH Bridges (temporary) loaded, search for linear reference point and then select Linear Reference Point.

← Enabled Groups		
Other ^	Assets	
Show Enabled Table Groups	Q Linear	\times
Show My Offline Groups	Linear Reference Point	

The next asset layer to load is Carriageway Section. Search for "Carriageway" and select Carriageway Section.

Once carriageway section is loaded, click on **Show Enabled Table Groups** on the left.

÷	Enabled Groups	
Other ^	Assets	•
Show Enabled Table Groups	Q Carr	×
Show My Offline Groups	Carriageway Section	
	Carriageway Surface	
	Critchlow Carriageway View	
	Traffic by Carriageway	

When you select Show Enabled Table Groups the list view will change to only show asset types you have selected. Click on the back arrow on the top left to go back to the main settings menu.

<	Enabled Groups	
Other ^	Assets	
Show All Table Groups	Q Search Asset Modules	
Show My Offline Groups	Carriageway Section	
	DOWH Bridges (temporary)	
	Linear Reference Point	

Now that we have the correct asset layers showing on the map, next we want to change the base map. Select App settings.

÷	Settings			
θ	Colleen jackson PNG Department of Works and Highways			
9	Papua New Guinea Last Accessed: 23/08/2023 12:46:10 PM			
Enat	Enabled Groups			
Арр	App Settings			
Priva	acy & Legal	>		
Help		>		
Log	out	>		

We want to change the map source from mobile default- so select Map source under maps.

÷	App Settings
RAMM Data	^
Download over Wi-Fi only	()»
Delete local RAMM data	Î
Delete local RAMM multimedia	Î
Maps	^
Map source	Mobile Default >
Download offline map region	>
Manage map offline packs	>
Delete all downloaded maps	Î
Region	^
Region	ANZ >
Environment	Beta >

Select Open Streetmap and then select Load Open Streetmap on the left. A pop up should appear saying settings loaded. Once Open Streetmap is loaded, click on the back arrow to go back to the settings menu.

← Map Source		
Other ^	Select a map source to load or set as the default (yellow star). The default map source is specific to this device. If the map source you load has not been downloaded it will use online/mobile data.	
Load Open Streetmap	Mobile Default $ else R $	
Set As Default		

Select the back arrow on the top left to go back to the main settings menu.

<	App Settings
RAMM Data	^
Download over Wi-Fi only	
Delete local RAMM data	Î
Delete local RAMM multimedia	Î
Maps	^
Map source	Open Streetmap >
Download offline map region	>
Manage map offline packs	>
Delete all downloaded maps	Î
Region	^
Region	ANZ >
Environment	Beta 🗲

Select the back arrow on the top left to go back to the map view.

÷ •	Settings	
θ	Colleen jackson PNG Department of Works and Highways	
0))	Papua New Guinea Last Accessed: 23/08/2023 12:46:10 PM	
Enab	Enabled Groups	
Арр	App Settings	
Priva	Privacy & Legal	
Help		>
Log	out	>