

Road Roughness - AWM Import Process


08/04/2026 1:08 pm +10



Article Purpose	This article defines the standard process for importing roughness data into AWM.
Intended Users	PNG AMB - GIS team
Last Reviewed	8 April 2026

Import Roughness Data into AWM


This section outlines the process for importing validated Roughometer or Totalpave roughness data into the AWM Roughness Reading table.

1. If you do not have the 'Citrix Workspace' software downloaded, download from <https://www.citrix.com/downloads/workspace-app/>.
2. Launch Citrix Workspace, click Sign In. If the window asks for your Store URL, fill in with "rammnz.cloud.com". In the sign in window, type in "ramm\" then your username, and your password.

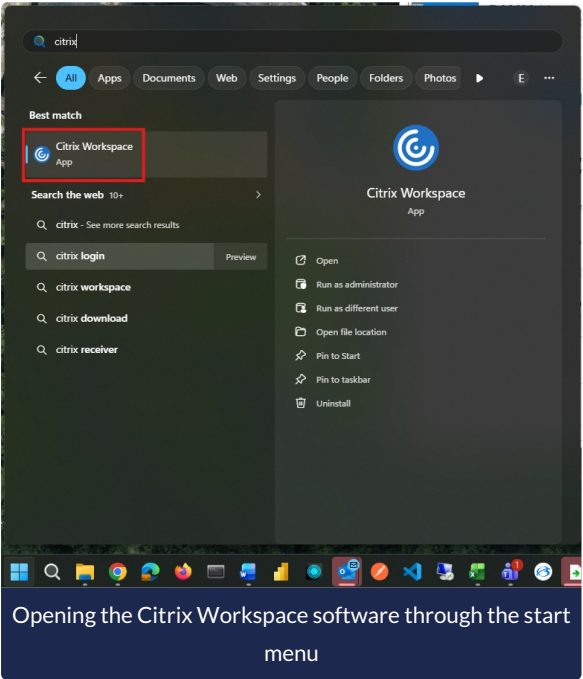


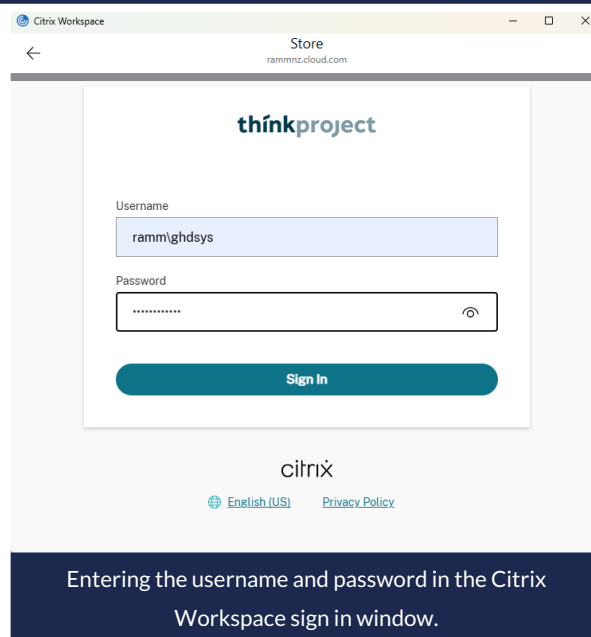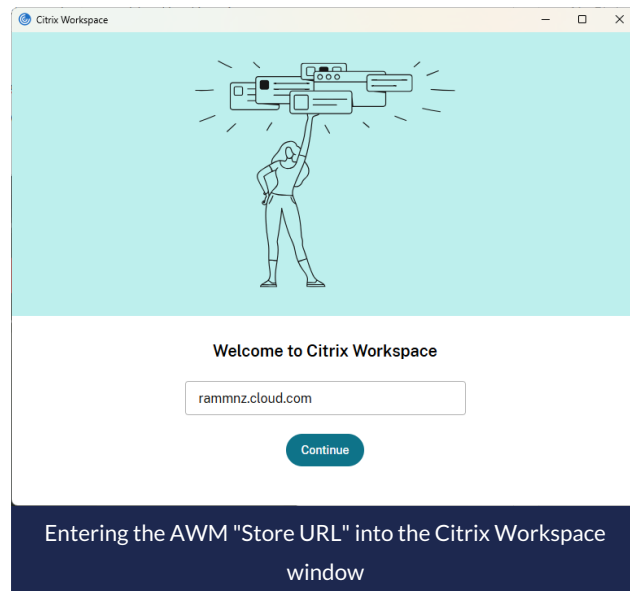


3. Click to open "RAMM Manager".

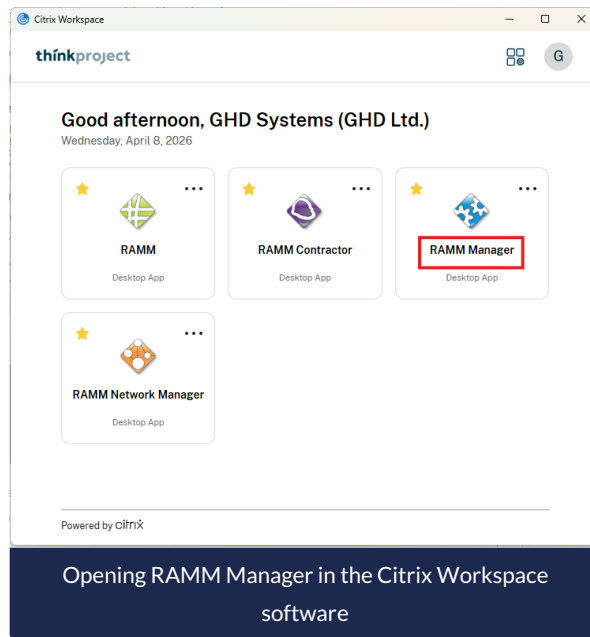


4. Confirm the correct database is selected (Papua New Guinea).

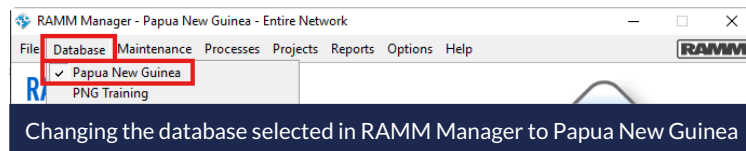


5. Go to File → Import File → Load.

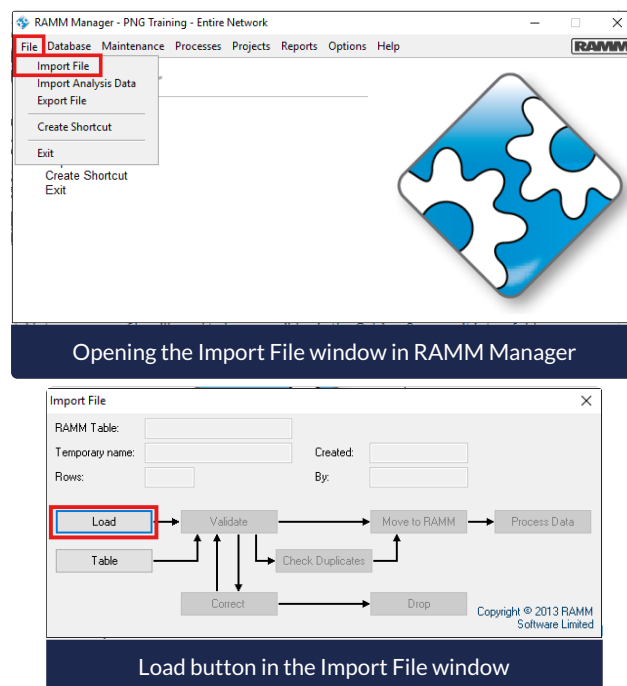

6. Select the model output CSV file (by clicking the ellipsis button and browsing files) and click Next. Note – your csv file will need to be accessible via the C drive. So move it into a folder accessible via C drive such as 'temp' (create a new folder if required).

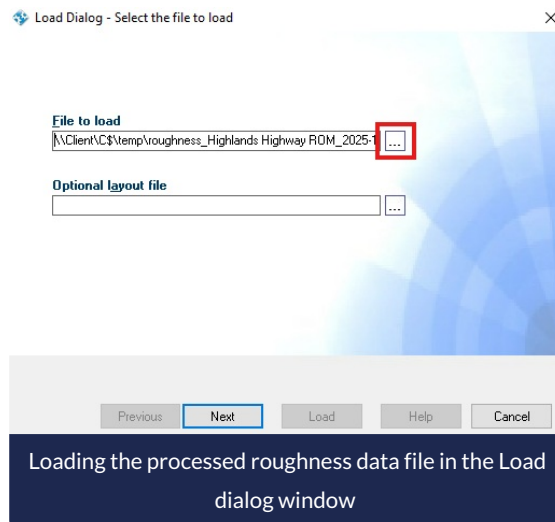

7. In the blank search bar at the top, type in "rough". Click the 'rough' row in the list of tables, and click Next.

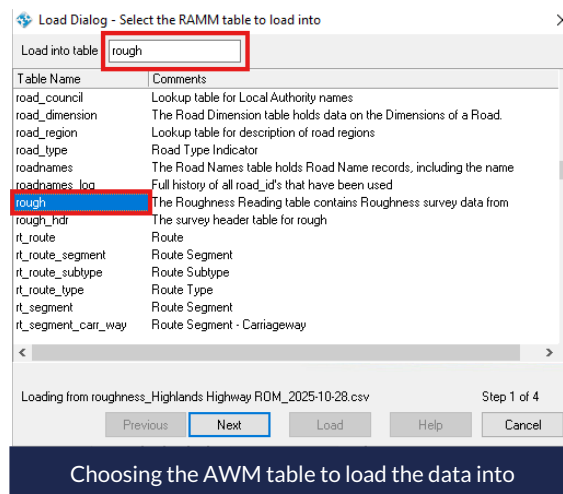


8. Choose Delimiter 'Comma' and click Next.


9. For 'Import Data Date Format' select DMY and click Next.

10. Link fields and add default values such as 'Latest' under the latest field. Then select Load (it will no longer be greyed out once field mapping complete). NOTE // Each field coloured red needs to have an icon next to it – either mapped to one of the input fields or have a default value provided.

a. If a field already has a chain icon or key icon next to it, it is likely you do not need to change it.

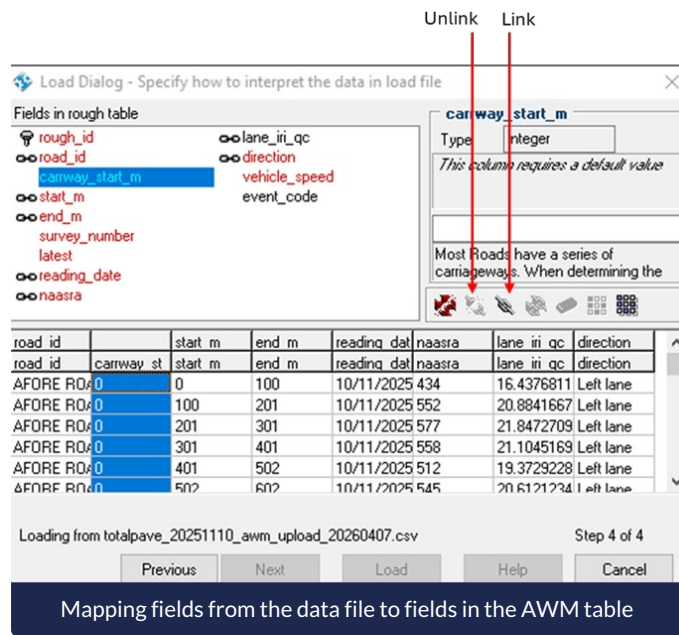


- b. Select `survey_number` in the Fields in rough table, then select the dropdown and select an existing survey header, or create a new survey header by clicking the + button.
- c. For `survey_number`, you may need to add a survey header if it is a new survey, using the + button. The 'Survey' name should start with S followed by a sequential ID number (use number following the previous number), then the year of survey followed by a description which should include name of road/region (or national) and the data collection method. For example, *S10 – 2025 National Totalpave Survey*. The date should be the latest date in the survey period. Then select the green arrow at the top to confirm.

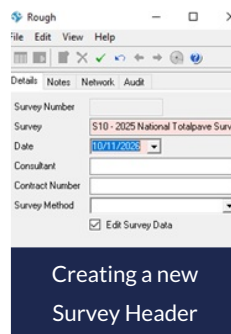

Good afternoon, GHD Systems (GHD Ltd.)

Thursday, February 12, 2026

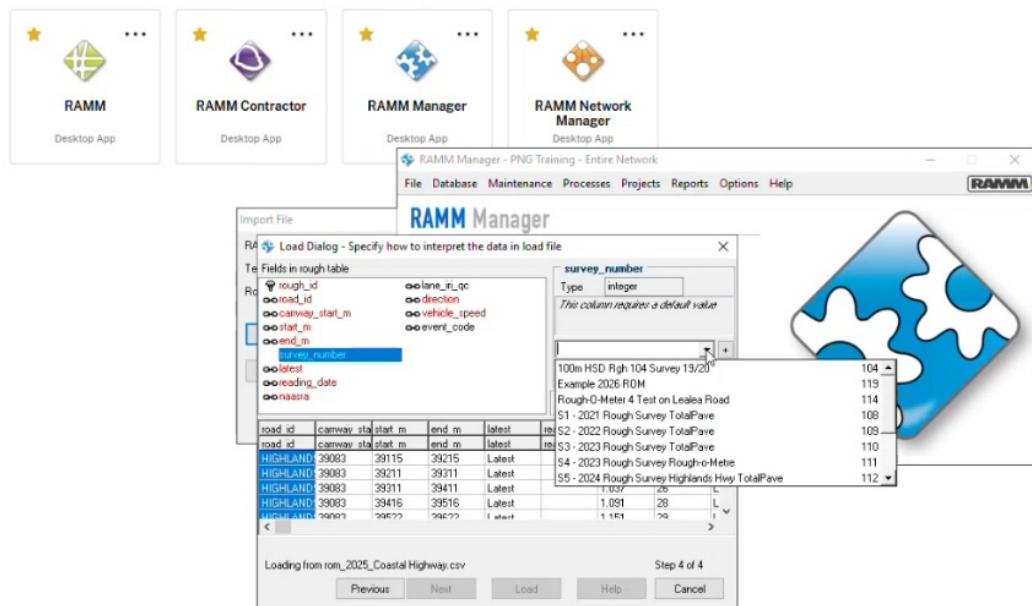

RAMM Manager showing dropdown for survey_number.

d. Once all required fields are mapped, click "Load".

11. For vehicle_speed, if it is not available in the data (currently it is not included in Totalpave but is included in Rough-o-meter) enter 50 (for 50 km/h). Note// This is a default value that could be decided to be updated.
12. Still on the same page, look through table and see if any columns are empty. If so, select the column and unlink it from the CSV. Then leave it blank or populate it yourself.
13. If your data is historical and not the latest readings, you can select the 'latest' column and unlink it. Then from the dropdown select 'Not latest' and select link again to link it back to the column.
14. Next sequentially select Next, Load, Validate, Check Duplicates and Move to RAMM. If you encounter any errors in these steps, they will need to be resolved before continuing.

Validate and Finalise Import

This section describes the final checks performed within AWM to confirm that Roughometer roughness data has been imported correctly and is visible in the Roughness Reading table.

1. Open AWM and search for Roughness Reading.
2. Filter the table for the survey used, by selecting the filter icon above the table. Then click Add and select Survey as the column to filter by with the value to filter for being the survey used.
3. Visually check the data is now in the AWM Roughness Reading table.

ASSET & WORK MANAGER

PNG Training

Menu

Map

Carriageway Section

Roughness Reading

Roughness

	Rough ID	Road	Start	End	Survey	Event C
☐	231859	HIGHLANDS HIGHWAY (NADZAB ...	39115	39215	Example 2026 ROM	
☐	231860	HIGHLANDS HIGHWAY (NADZAB ...	39211	39311	Example 2026 ROM	
☐	231861	HIGHLANDS HIGHWAY (NADZAB ...	39311	39411	Example 2026 ROM	
☐	231862	HIGHLANDS HIGHWAY (NADZAB ...	39416	39516	Example 2026 ROM	
☐	231863	HIGHLANDS HIGHWAY (NADZAB ...	39522	39622	Example 2026 ROM	
☐	231864	HIGHLANDS HIGHWAY (NADZAB ...	39626	39726	Example 2026 ROM	
☐	231865	HIGHLANDS HIGHWAY (NADZAB ...	39729	39829	Example 2026 ROM	
☐	231866	HIGHLANDS HIGHWAY (NADZAB ...	39831	39931	Example 2026 ROM	
☐	231867	HIGHLANDS HIGHWAY (NADZAB ...	39924	40024	Example 2026 ROM	
☐	231868	HIGHLANDS HIGHWAY (NADZAB ...	40027	40127	Example 2026 ROM	
☐	231869	HIGHLANDS HIGHWAY (NADZAB ...	40122	40222	Example 2026 ROM	
☐	231870	HIGHLANDS HIGHWAY (NADZAB ...	40223	40323	Example 2026 ROM	
☐	231871	HIGHLANDS HIGHWAY (NADZAB ...	40328	40428	Example 2026 ROM	
☐	231872	HIGHLANDS HIGHWAY (NADZAB ...	40426	40526	Example 2026 ROM	
☐	231873	HIGHLANDS HIGHWAY (NADZAB ...	40531	40631	Example 2026 ROM	
☐	231874	HIGHLANDS HIGHWAY (NADZAB ...	40634	40734	Example 2026 ROM	
☐	231875	HIGHLANDS HIGHWAY (NADZAB ...	40735	40835	Example 2026 ROM	

Roughness Filter

Latest

in

Latest

Survey

in

Example 2026 ROM

Add condition on Roughness Reading

Add

Add an Or condition

Collapse

Rows per page 50 1-50 of 2586

AWM Roughness Reading table after being imported.

1. If this is the latest survey on this particular section of road we need all other surveys for Roughness Reading on that road to be turned to historic. To do this, click process data and then in the status check window tick Set most recent flags for Roughness Data. Then begin processing. (Screenshots of how to do this are provided below).

RAMM Manager - PNG Training - Entire Network

File Database Maintenance Processes Projects Reports Options Help

RAMM Manager

Home > File

- Import File
 - Import Analysis Data
 - Export File
 - Create Shortcut
 - Exit



Import File

RAMM Table:

Temporary name:

Rows:

Created:

By:

Load → Validate → Move to RAMM → **Process Data**

Table → Validate → Check Duplicates → Move to RAMM

Validate → Correct → Drop

Copyright © 2013 RAMM Software Limited

Where to find the Process Data button.

